


## OPERATION MANUAL OF #LVC-940DN-94DS

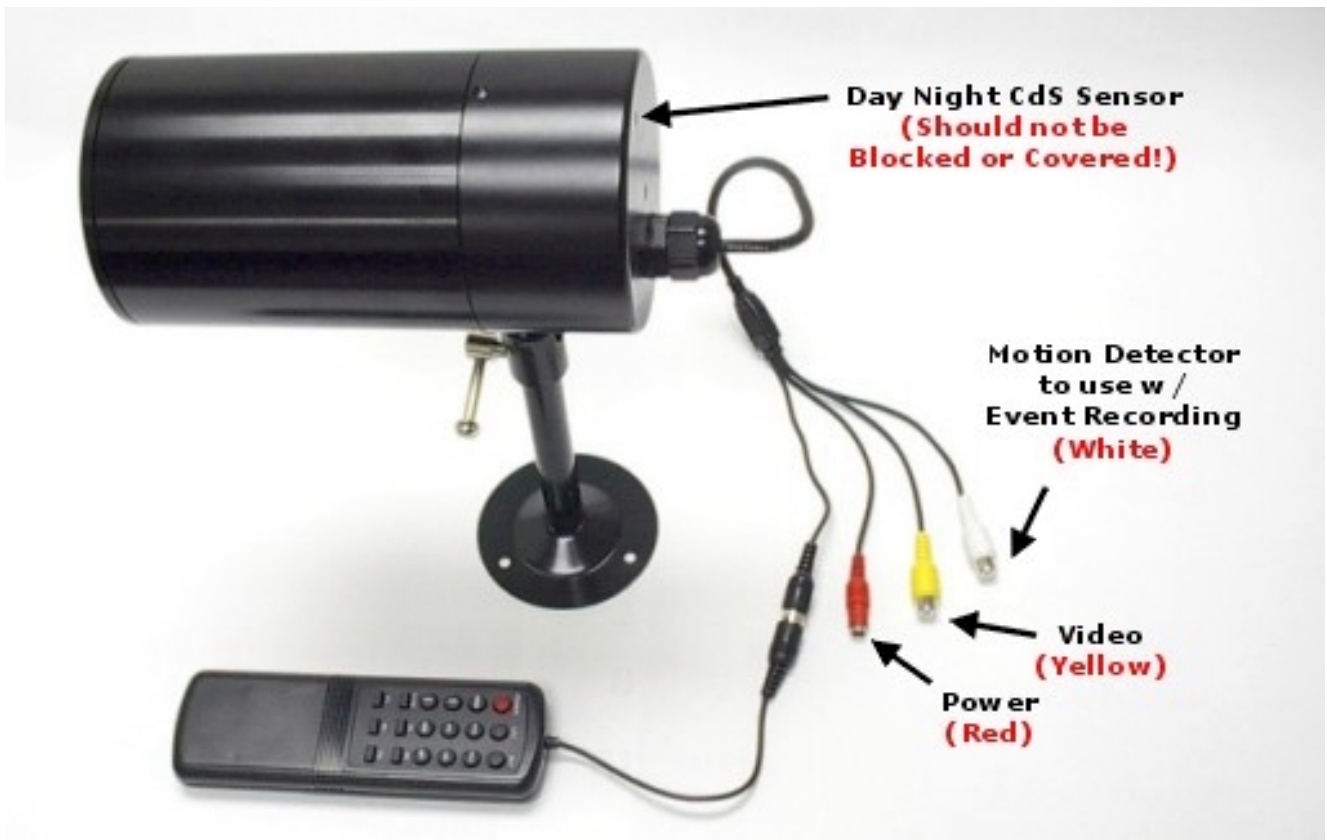

1. Connect RCA JACK (Yellow) to Video Input, RCA Jack (Black) to Remote control unit, RCA Jack (White) to use w/ Event Recording, DC Jack (Red) to Power.

\*\*\*Note: The power cable length should not exceed **59ft (18M)** from the connected camera when using a standard power cable, otherwise need to use a special power cable that offers a lower resistance over long wire runs when the power cable length needs to be extended more than 59ft (18M)\*\*\*

2. Leave as the factory default set as "OFF" when only one camera is connected, otherwise go on to the screen menu setting and select a desired camera ID number to begin to control the camera.

3. Do not block or cover the Day Night CdS Sensor on the rear side of camera with any other object, otherwise the auto day night filter changing would not work properly.

#### 4. Button Control of Remote Control Unit

Button Name	When Controlling Camera	When Setting Screen Menu
POWER	Camera On & Off	Camera On & Off
MENU	N/A	Menu Screen On and Off
L(↑)	Zoom Out	Move Upward
S(↓)	Zoom In	Move Downward
F(+)	Manual Near Focus (+)	Number ascent when setting the Camera ID Move to Next Menu Level when setting other features
F(-)	Manual Far Focus (-)	Number descent when setting the Camera ID Move to Next Menu Level when setting other features
← → ↓ ↑	View Direction Control within Digital Zoom Range (X28 ~ X216)	View Direction Control within Digital Zoom Range (X28 ~ X216)
X1/X2	Jump to X1 and X2 Zoom Range of the most recently pressed Preset Optical Zoom of P1, P2, or P3	Jump to X1 and X2 Zoom Range of the most recently pressed Preset Optical Zoom of P1, P2, or P3
X4	Jump to X4 Zoom Range of the most recently pressed Preset Optical Zoom of P1, P2, or P3	Jump to X4 Zoom Range of the most recently pressed Preset Optical Zoom of P1, P2, or P3
X8	Jump to X8 Zoom Range of the most recently pressed Preset Optical Zoom of P1, P2, or P3	Jump to X8 Zoom Range of the most recently pressed Preset Optical Zoom of P1, P2, or P3
OSD	N/A	On & Off Current Zoom Range on the screen
SET	Go Back to the most recently pressed Preset Optical Zoom Button of P1, P2, P3	Go Back to the previous stage
P1, P2, P3	Jump to Preset Optical Zoom Range (x1 ~ x27)	Use when Presetting Optical Zoom Range How to Preset: 1. Press MENU button more than 3 seconds 2. Press L(↑) or S(↓) to obtain a desired zoom range when P" letter appears on the right upper corner of the screen 3. Then press the desired preset button among P1, P2, or P3 and MENU button to complete